SK-103 STARTER REPAIR KIT PARTS LIST

Qty.	Description
	•
1	Drive end housing bushing
1	Armature shaft thrust washer
1	Armature shaft lock ring
1	Armature shaft retainer ring
4	Solenoid mounting screws
4	Solenoid mounting screws lock washers
1	Shift lever arm nut and lock washer
1	Solenoid to positive terminal lock washer and nut
2	Brush holder hinge pins
1	Field coil to positive terminal screw and lock washer
2	Negative brush holders
2	Positive brush holders
4	Brush holder screws
4	Brushes
2	Brush springs
1	Leather spacer washer
1	Com-end bushing
2	Thru holt lock washers